



Installation Safety & Equipment



IMPORTANT!
**READ MANUALS FULLY BEFORE UNPACKING,
ASSEMBLING & INSTALLING ANTENNA**

SERVICE PERSONNEL

Installation, maintenance or removal of equipment must be carried out by authorized personnel having the appropriate technical training, education and experience necessary to be cognizant of hazards during installation and service, and of measures to minimize any danger to themselves or any other person.

SAFETY REGULATIONS

Always use mandatory local safety regulations, instructions in this manual shall be used as a supplement to the local regulations. In case of conflict between the safety instructions in this manual and local safety regulations, the local mandatory safety regulations shall prevail. CommScope will not accept responsibility for accidents resulting from non-compliance to regulations

INSTALLATION HARDWARE

Do not use any components (for example screws and nuts) other than those enclosed with the equipment or recommended by CommScope.



Use protective wear to avoid skin contact with conductive grease. Keep away from mouth. Wash thoroughly after use with liberal amounts of liquid soap and rinse with water. Do not store open near food or food substances.
Contents: Oil, clay & zinc dust.

HOISTING & WORKING AT HEIGHTS



Some working areas involve the risk of accidents caused by falling or by falling objects

- Use only tested and approved hoisting equipment in accordance with the instructions supplied with the equipment.
- Appropriately trained personnel must operate the hoisting device.
- Never walk under hoisted loads.

GENERAL MAINTENANCE

- The antenna is designed such that minimal maintenance is required. Equipment should be inspected once a year by qualified personnel to verify proper installation, maintenance, and condition of equipment to ensure trouble free operation.

CLEANING OF ANTENNA

- If subsequent cleaning of the antenna is required use water and mild detergent.

HARDWARE AND TOOLS

Fastener Torques & Tool Sizes									
Thread	M3	M4	M5	M6	M8	M10	M12	M16	M20
Stainless Steel Hardware Torque (Nm $\pm$5%)	1.0	2.2	4.5	7.7	19	38	-	-	-
Galvanised Steel Hardware Torque (Nm $\pm$5%)	-	-	-	-	-	38	60	95	185
Brass Hardware Torque (Nm $\pm$5%)	-	-	-	-	-	-	-	-	95
Spanner and Sockets (mm A/F)	5.5	7	8	10	13	17	19	24	30


UNLESS STATED OTHERWISE

Small Diameter Mount


Bulletin 7847237 page 2 of 2

Version 04 Status RE Rev E


Model Version 01 Status RE Rev B

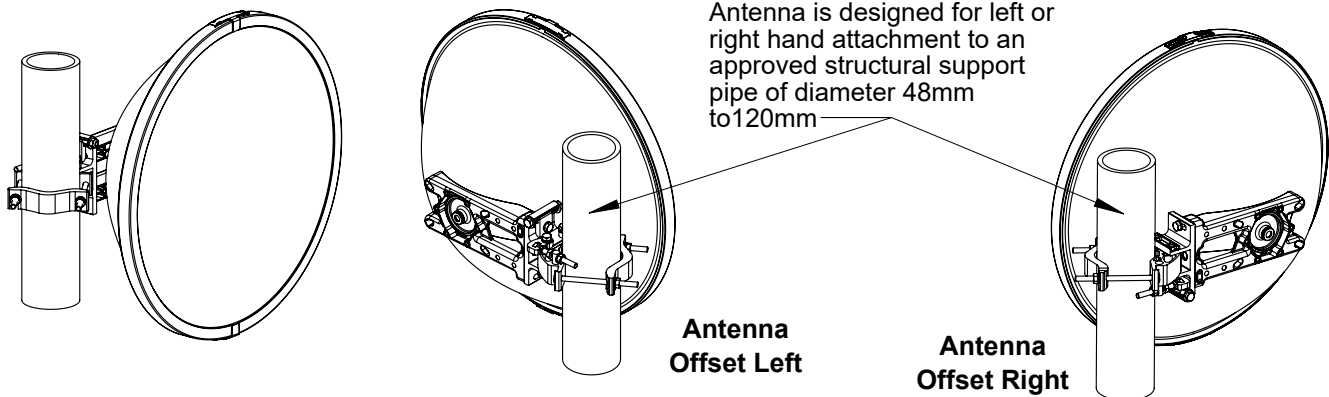

1 Fit mount and attach to pipe

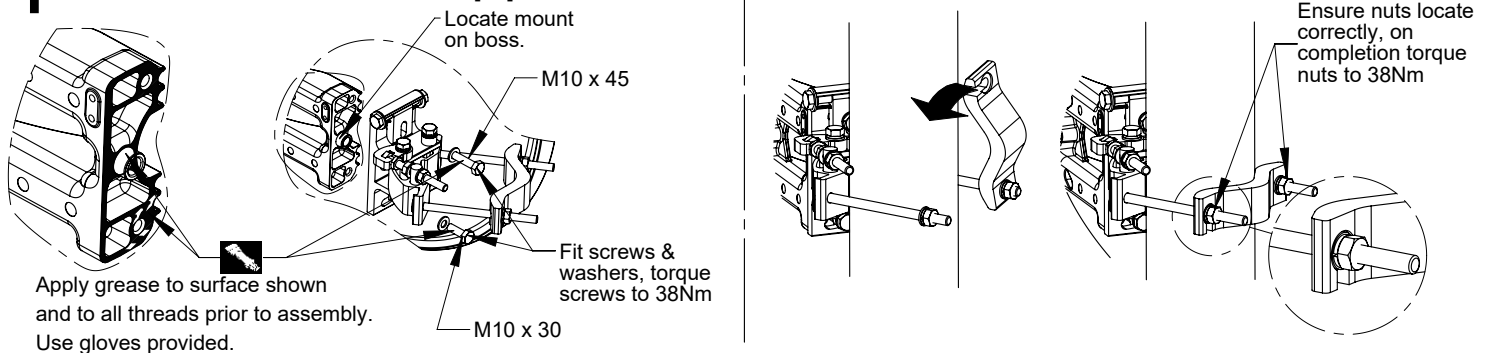

2 Elevation Adjustment

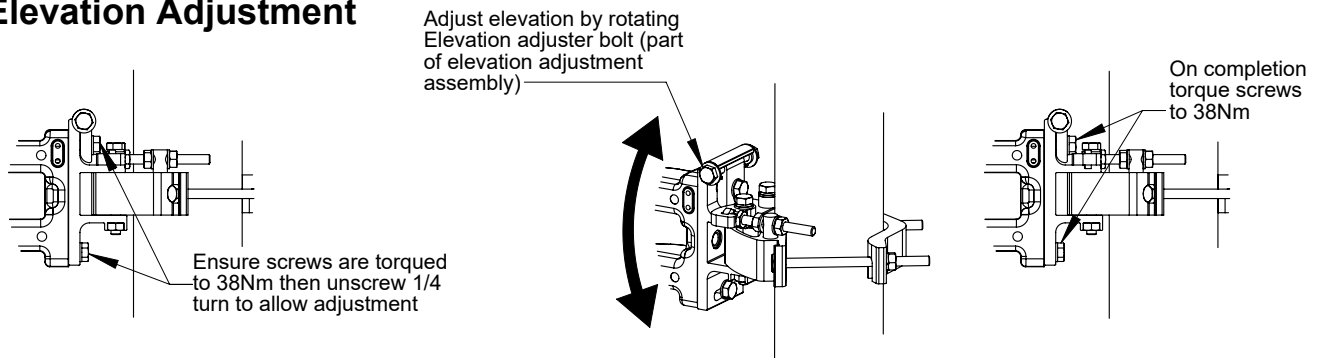

3 Azimuth Adjustment

Tighten all hardware to specified torque

